



Внимание! Для подключения сканера к POS используйте кабель **90A052121 REV.B**

Настройка сканера.




Enter/Exit Programming Mode




Interface Type = RS-232 Single Cable



Enter/Exit Programming Mode

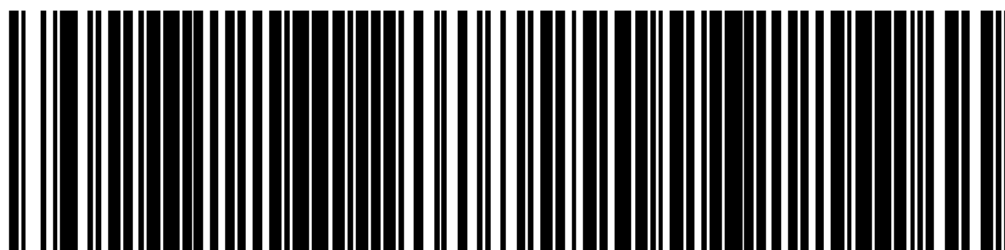

RETURN TO FACTORY SETTINGS

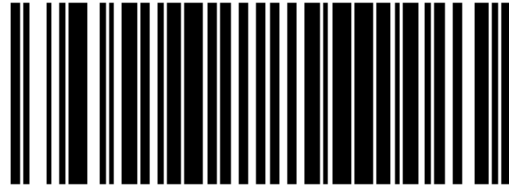

Enter/Exit Programming Mode



Mobile Commerce Reader = Disable




TDR = Disable



Scanner Control Button = Disable All Functions



Power-up Beep Control = No Tone

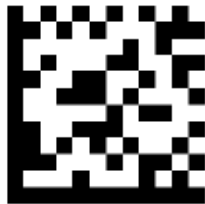

Good Read Beep Control = Disable




Scale Sentry Override Button = Disable



Scale Enforced Zero Return = Non Zero for More Than 4
minutes OR Below Zero



Remote Display = Disable

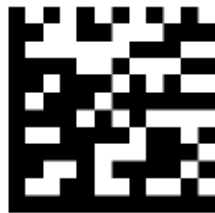

Auxiliary Port Mode = External Handheld Input




UPC-A Check Character Transmission = Enable



EAN-13 Check Character Transmission = Enable



EAN-8 Check Character Transmission = Enable

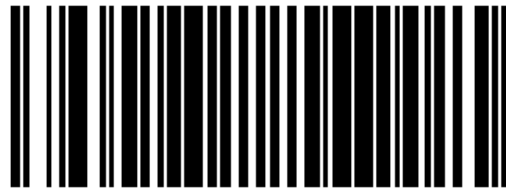

Enter/Exit Programming Mode

Увеличиваем таймаут перехода в спящий режим до 1 часа.



Enter/Exit Programming Mode



Set Sleep Mode Timer





5



5



Enter/Exit Programming Mode

Что делать, если сканер не передает вес на кассу? Один из вариантов - сканер передает четыре цифры веса вместо ожидаемых пяти. Для изменения этой настройки нужен доступ к кнопке калибровки, так что лучше этим озаботится до поверки или во время поверки весов.



Удерживая кнопку калибровки весовой ячейки, сканируем один ШК ниже

